



FIG. 1

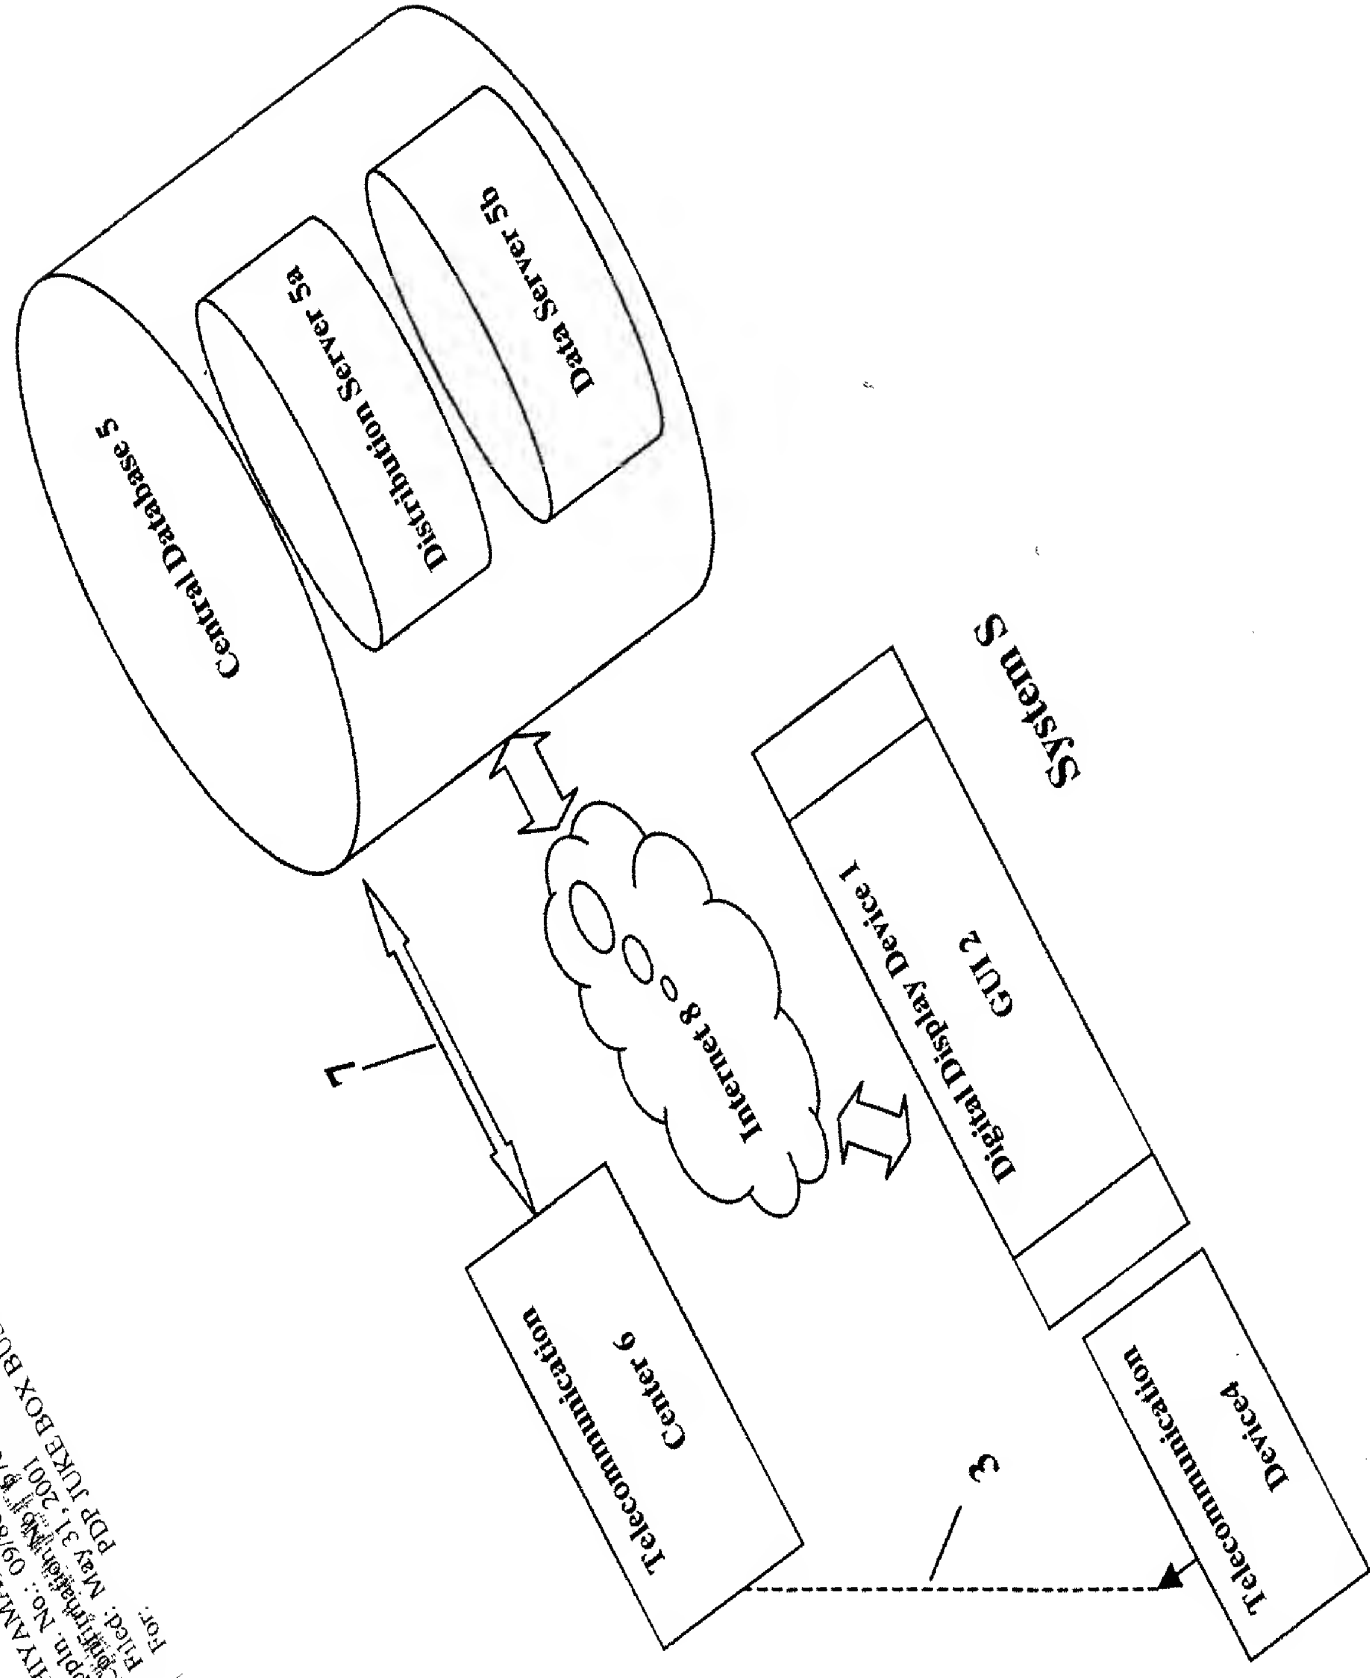

UCHIYAMA, KOICHIRO  
 Appl. No.: 09/867,542  
 Filed: May 3, 2001  
 Title: PDP BOX BUSINESS PLAN

FIG. 2

System Sj

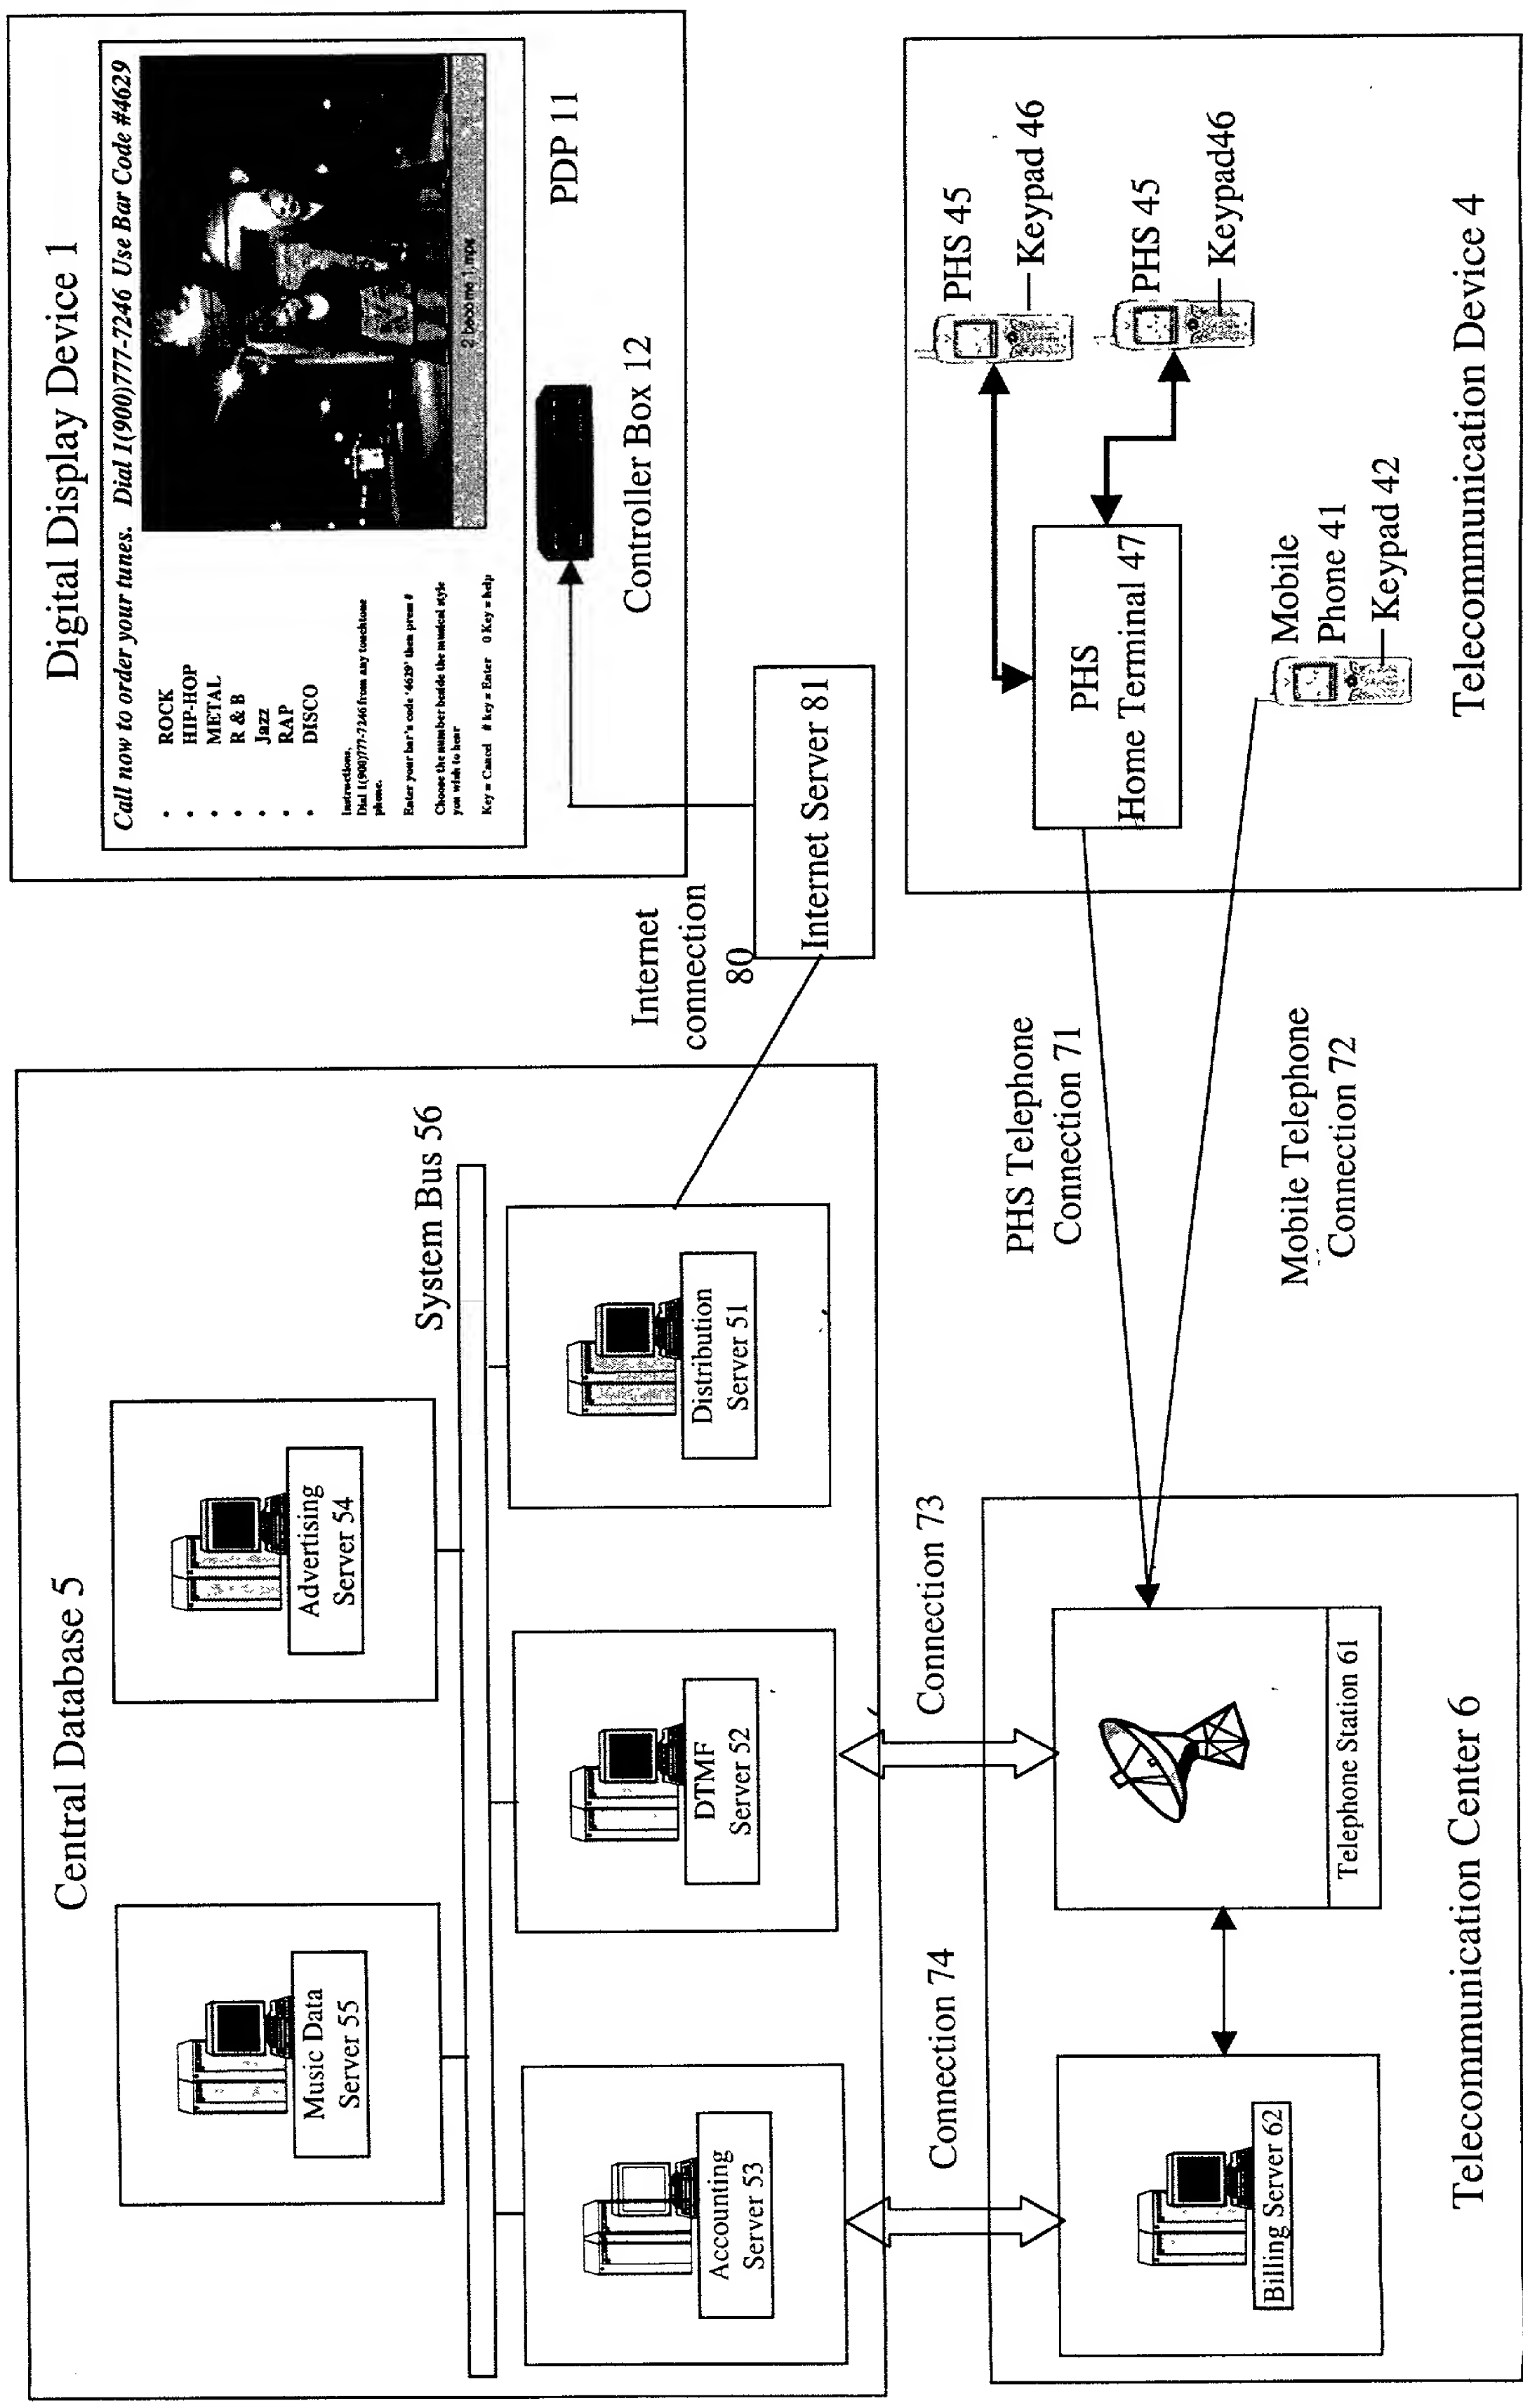

Third party charge phone number 21      Bar code 22

*Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629*

1. ROCK
2. HIP-HOP
3. METAL
4. R&B
5. JAZZ
6. RAP
7. DISCO

Navigation  
menu 23

Instructions;  
Dial 1(900)777-7246 from any  
touchtone phone.

Enter your bar's code '4629' then press #

Choose the number beside the musical  
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

—202

201



Music Video Clip 24

203

PDP11

FIG. 3      JUKEBOX MODE

"21529860"

Third party charge phone number 21

Bar code 22

*Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629*

1.ROCK

2.HIP-HOP

3.METAL

4.R&B

5.JAZZ

6.RAP

7.DISCO

Navigation  
menu 23

Instructions;

Dial 1(900)777-7246 from any  
touchtone phone.

Enter your bar's code '4629' then press #




Choose the number beside the musical  
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

—212

211

Advertisement25

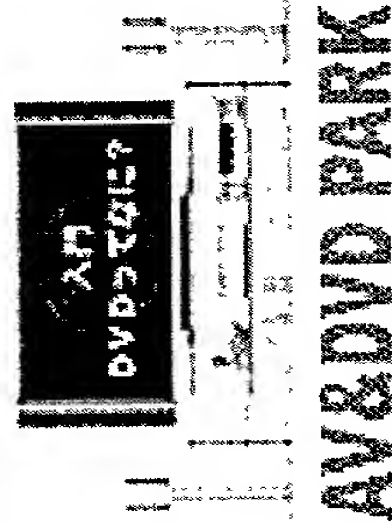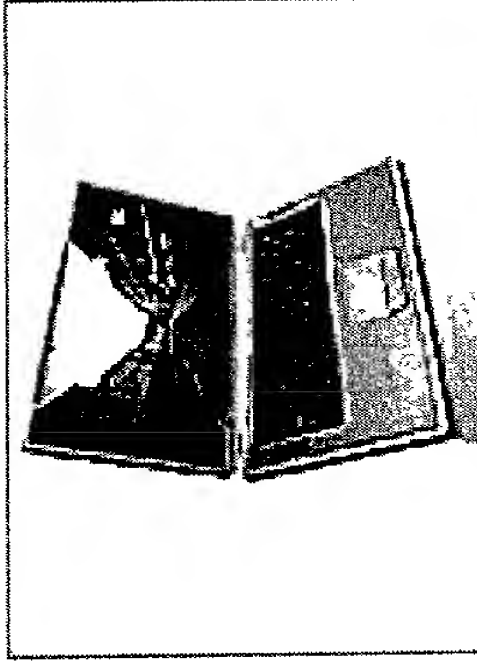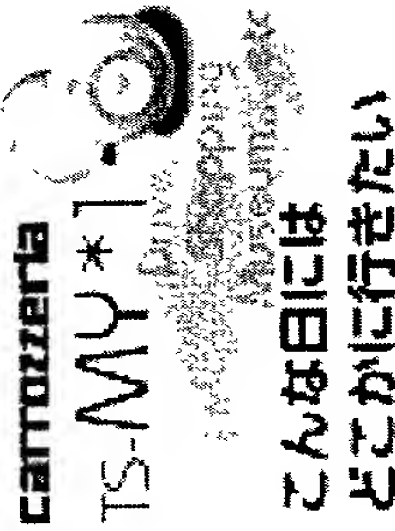

213

PDP11

FIG. 4 COMMERCIAL MODE


Third party charge phone number 21 Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

- Instructions;  
Dial 1(900)777-7246 from  
any touchtone phone.
- Enter your bar's code '4629'  
then press #
- Choose the number beside  
the musical style you wish to  
hear.
- Key = Cancel
  - # key = Enter
  - 0 Key = help
- Navigation  
menu 23
- 1.ROCK
  - 2.HIP-HOP
  - 3.METAL
  - 4.R&B
  - 5.JAZZ
  - 6.RAP
  - 7.DISCO



Music Video Clip 24

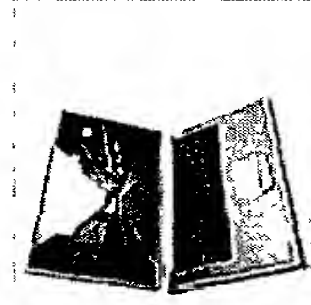


Advertisement25



AV&DVD PARK



AV&DVD PARK

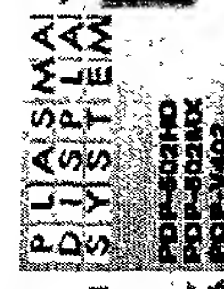

AV&DVD PARK

FIG. 5 MIX MODE

PDP11


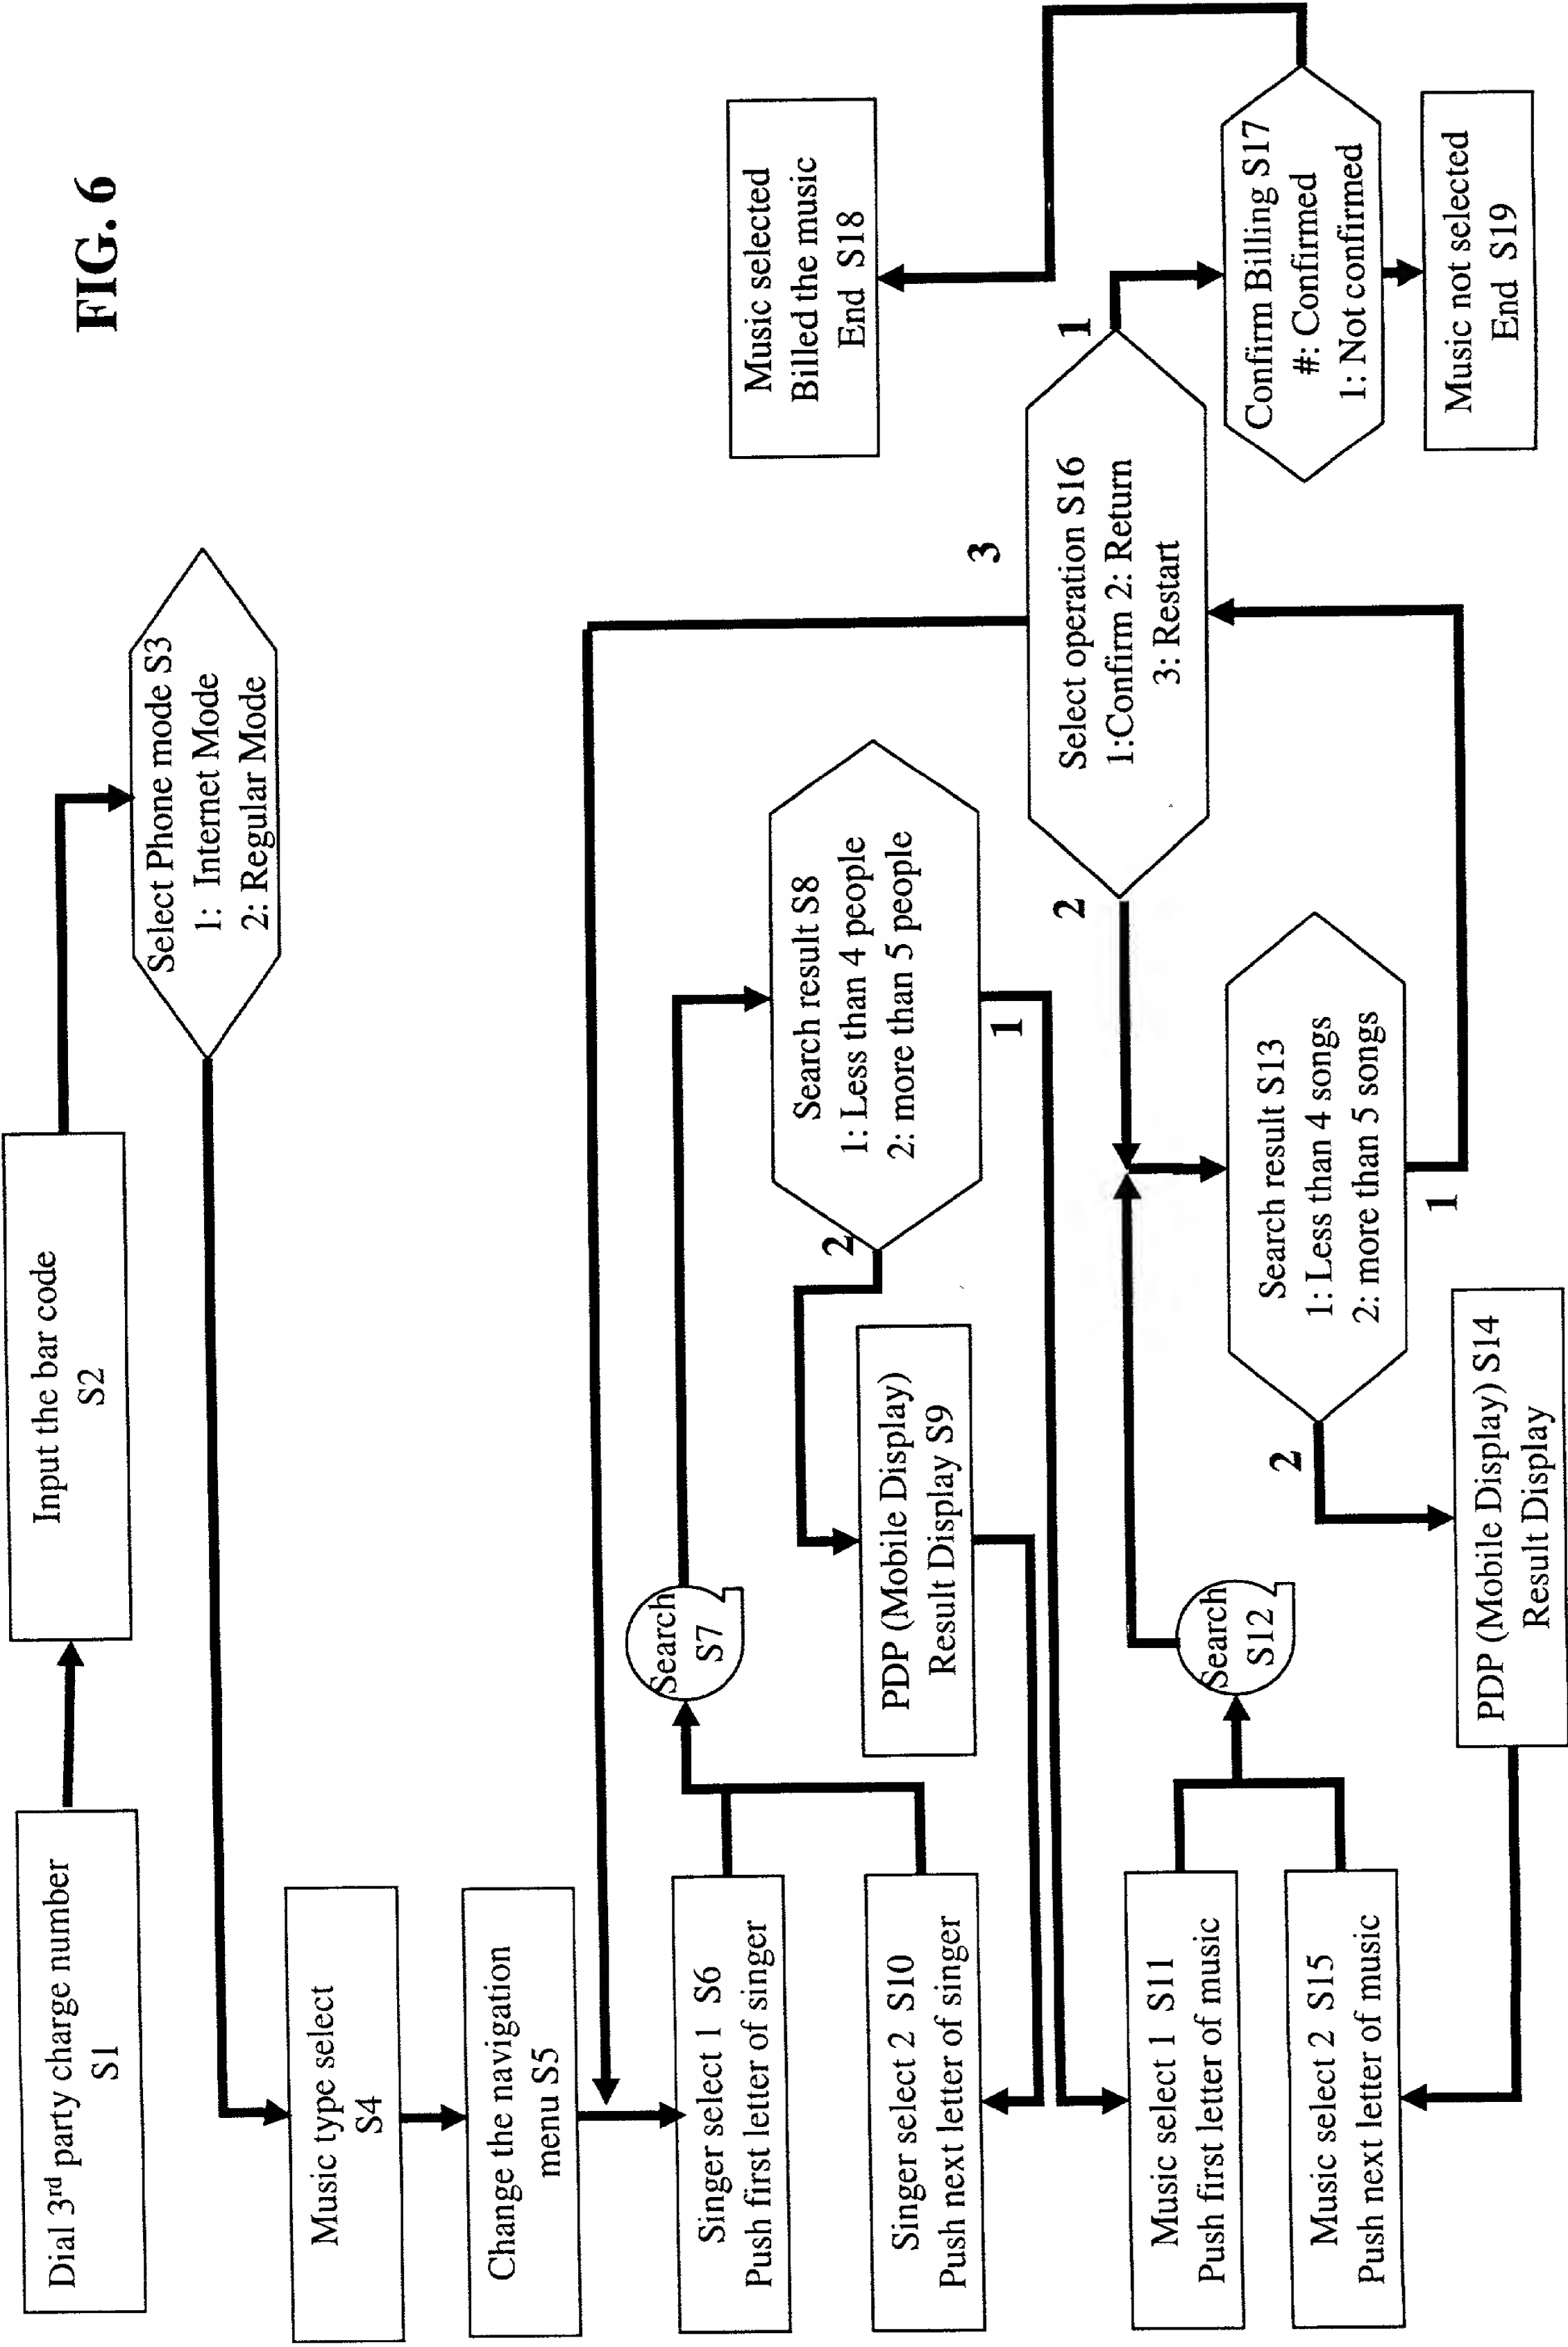


FIG. 7





**FIG. 8**  
**System Sc**

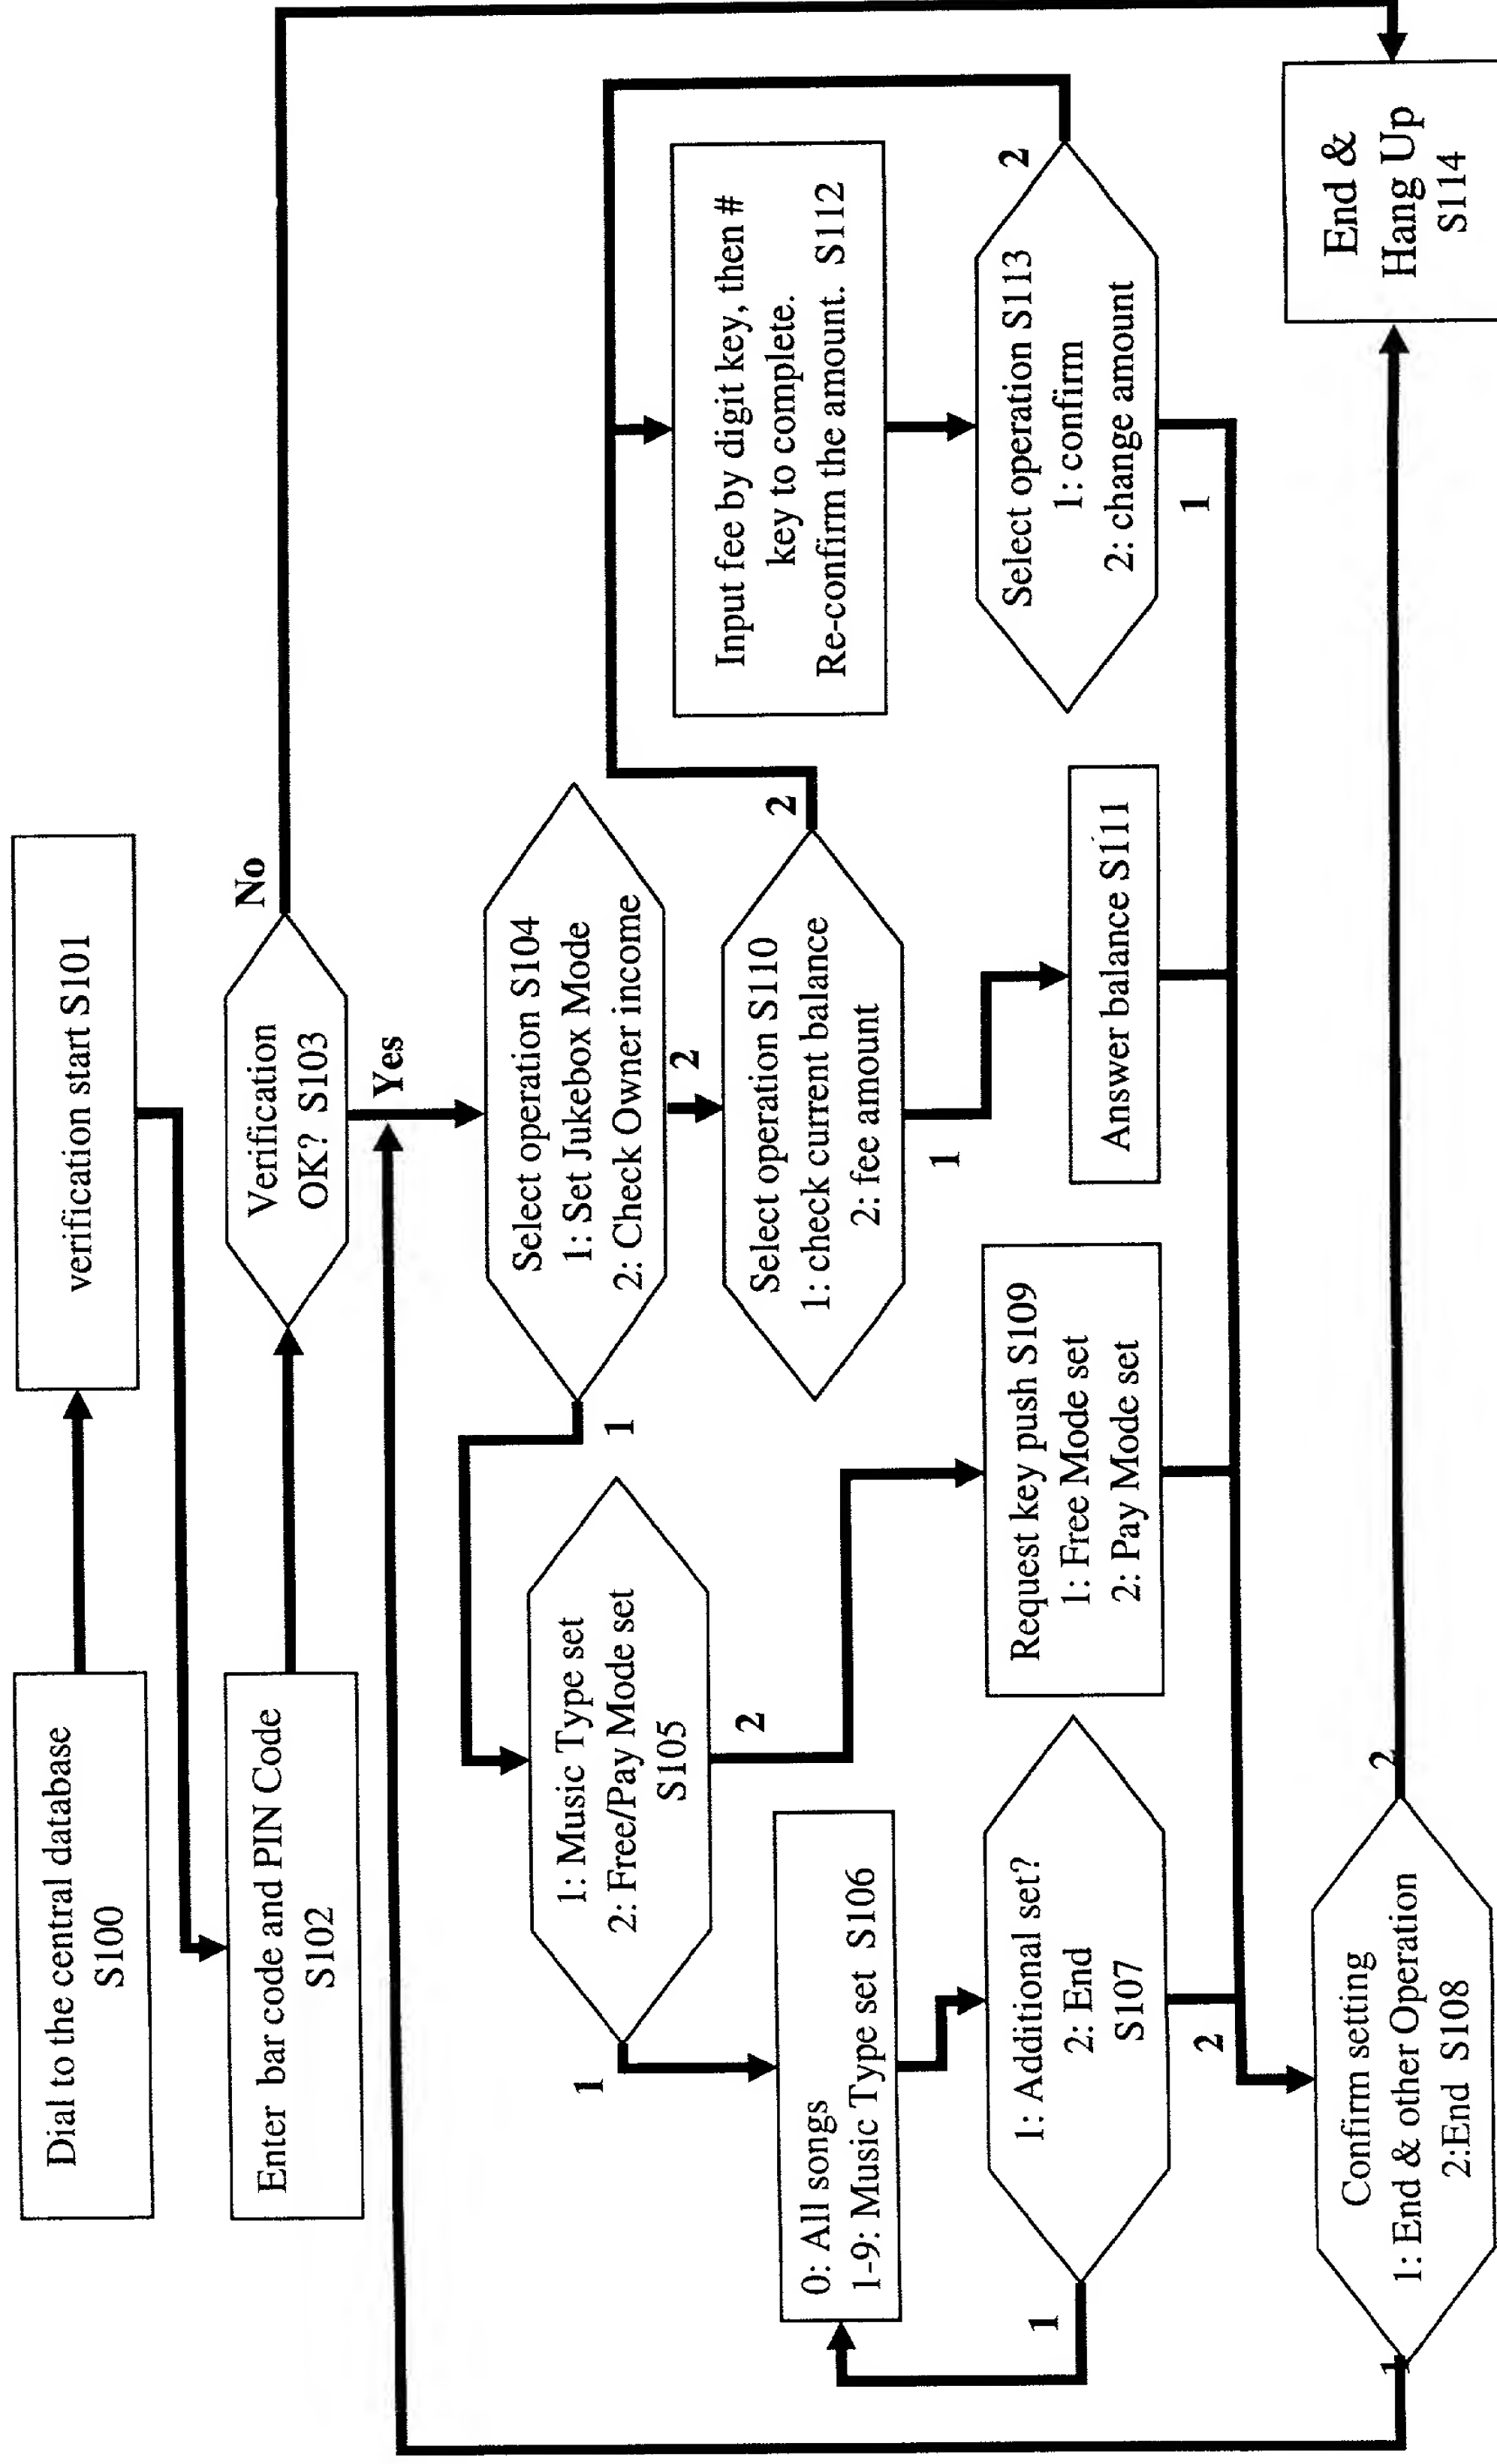